



8



Position	Spare parts	Part number
1	Inverter board	033061000400
2	PC board	033060510400H72
3	Touch controller with built-in wifi	034063010001
4	Power filter plate	033092410000
5	Reactor	041301090000
6	Electronic expansion valve	006121000001
7	Fan motor	032051560000
8	Temperature sensor(without Humidity Sensor)	Z35043000400C-H
8	Humidity Sensor	035030040000
9	Compressor	031064000000
10	Condenser	Z01011550002
11	Evaporator	Z01011540002
12	High pressure protection switch	040050630000
13	Low pressure protection switch	040050130000
14	Low Pressure valve	006080500000
15	Left centrifugal fan	007020050000
16	Right centrifugal fan	007020050000
17	Top cover	0020600425P1
18	Front Panel	002060041902
19	Left Panel	0020600423P1
20	Right Panel	0020600424P1
21	Back Panel	002060042015
22	Left Pole	002060042200
23	Bottom board	002060040100
24	Wall bracket	002060042115
25	Electrical heating element	Z42010050000