



8



Position	Spare parts	Part number
1	Inverter board	033061000400
2	PC board	033060510400H48
3	Touch controller with built-in wifi	034063010001
4	Power filter plate	033092410000
5	Reactor	041301090000
6	Electronic expansion valve	006121000001
7	Fan motor	032051570000
8	Temperature sensor(without Humidity Sensor)	Z35043000400C-H
8	Humidity Sensor	035030040000
9	Compressor	031064070000
10	Condenser	Z01011580002
11	Evaporator	Z01011570002
12	High pressure protection switch	040050630000
13	Low pressure protection switch	040050130000
14	Low Pressure valve	006080500000
15	Left centrifugal fan	007020050000
16	Right centrifugal fan	/
17	Top cover	0020600610P1
18	Front Panel	002060060700
19	Left Panel	0020600423P1
20	Right Panel	0020600424P1
21	Back Panel	002060060815
22	Left Pole	002060042200
23	Bottom board	002060060100
24	Wall bracket	002060060915
25	Electrical heating element	Z42010040000