


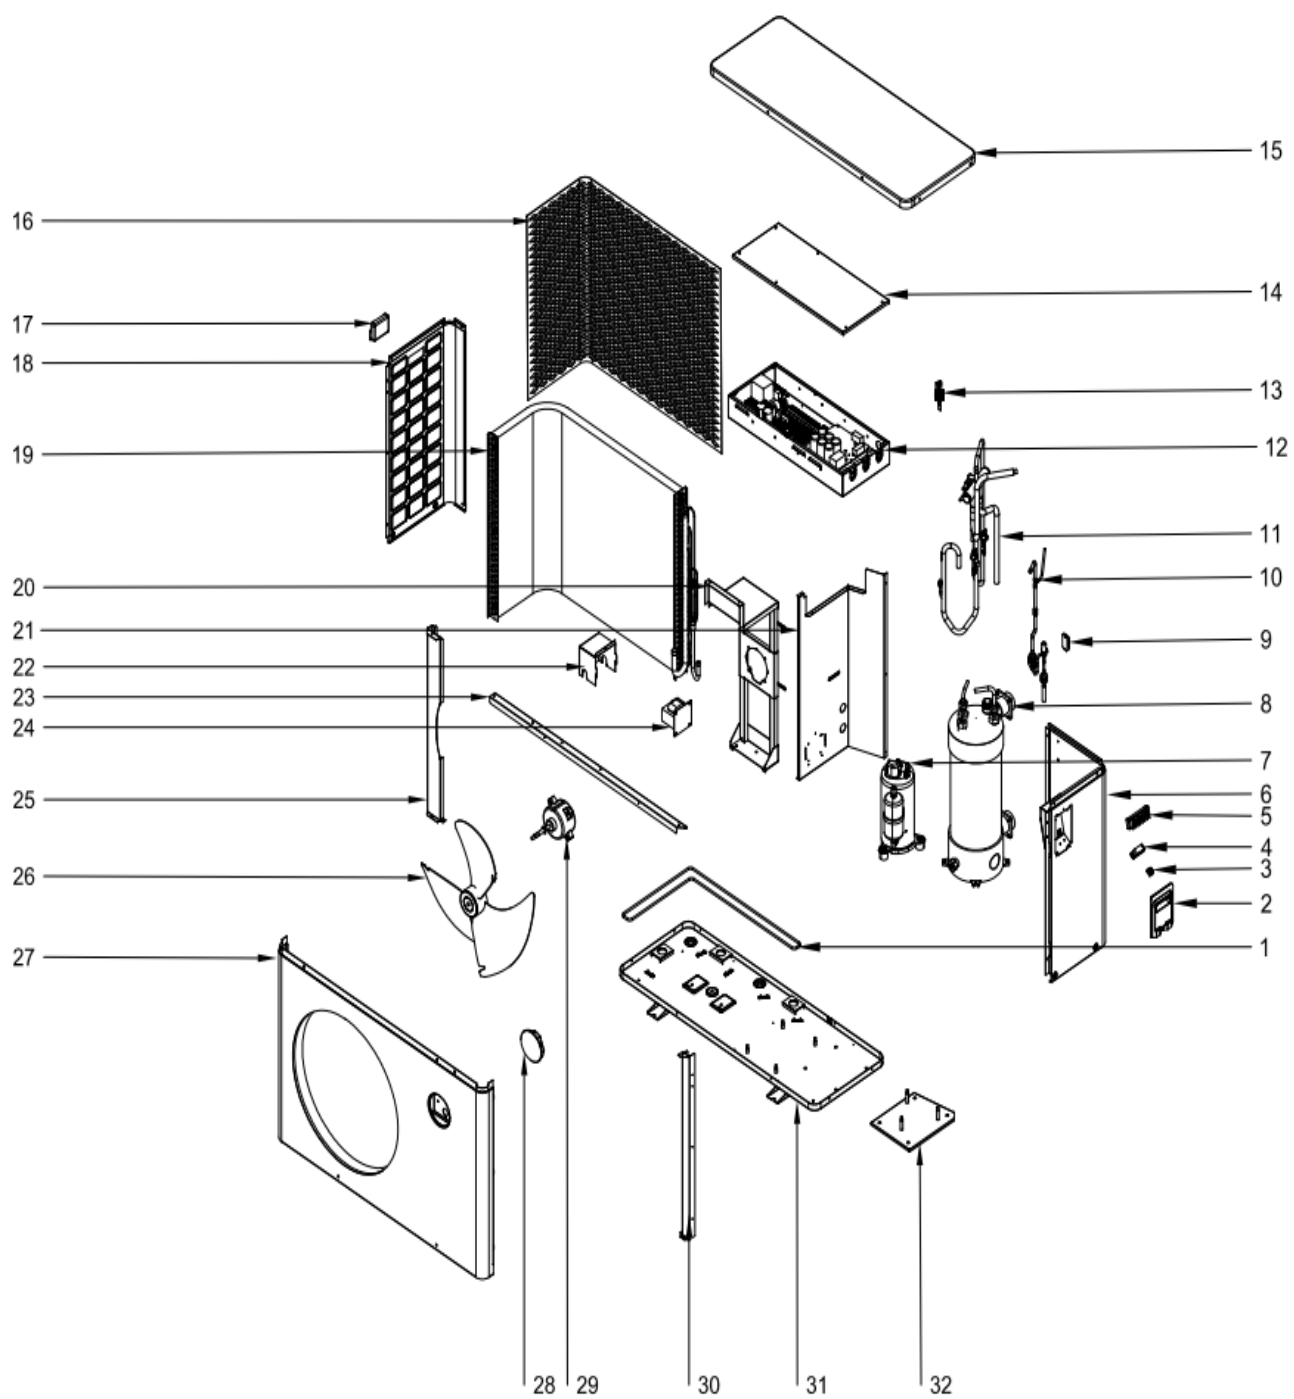

Position	Spare parts	Code
1	Chassis Electric Heater Belt	113-02-17-00106
2	Right Handle	107-10002-618
3	Linkage Switch	113-04-10-00001
4	Cable Clip	2100130002
5	Terminal Block	101-10027-204
6	Right Plate	112-46-14-00772
7	Compressor	110-00-10-00186
8	Titanium Tube Heat Exchanger	110-05-13-00160
9	Sensor Holder	2149000156
10	Throttle Device Assembly	100-10004-801
		110-09-14-00161
11	Four-Way Valve Assembly	110-09-20-00076
		110-09-26-00028
12	Electrical Box	112-04-10-01173
13	Water Flow Switch	113-00-10-00040
14	Electrical Box Cover	112-04-10-01174
15	Top Cover	112-46-15-00868
16	Back Net	106-10011-061
17	Left Handle	107-10002-006
18	Left Plate	112-46-13-00696
19	Finned Heat Exchanger	110-05-12-00915
20	Motor Support	112-10-10-00375
21	Middle Partition	112-03-10-00609
22	Reactance Cover	112-46-10-02992
23	Crossbeam	112-46-10-03917
24	Reactance	101-10018-987
25	Left Column	112-46-10-03915
26	Fan Blade	110-01-10-00042
27	Front Plate	112-46-11-01214
28	Wire Controller	305-00030
29	Fan Motor	110-03-10-00184
30	Right Column	112-46-10-03916
31	Chassis	112-00-10-01177
32	Compressor Fixing Plate	112-46-10-02993